



ProHome 8791

Please refer to the **Accessories for Alarm Systems in the Protect Series** operating manual and detailed **Alarm System Operating Manual** for detailed information on assembly, installation and operation. Both documents are enclosed with the base unit.

Package Contents

Base unit	1
Power adapter plug	2
Convenient remote control	1
Motion detector	1
Outdoor siren	1
IP camera OC 1280 P	1
Window/door contact	2
Batteries	7 x AAA cell 6 x round cell (AA) 1 x round cell (CR 2032)
Assembly material	Base unit legs, screws, dowels
Operating manual	1


Please check the contents of the package carefully. If anything is missing or damaged, you must NOT put the alarm system into operation! In such cases, contact your sales outlet, with your purchase receipt to hand, or the OLYMPIA service centre.

Keep the packaging box for the alarm system in a safe place for possible return delivery.

Connecting the Base Unit

In order to ensure unrestricted use of the base unit, you need a SIM card from a mobile phone provider. A SIM card is not included in the equipment supplied.

- 1 Insert a SIM card in the base unit.
- 2 Insert three batteries (AAA) in the battery compartment paying attention to correct polarity.
- 3 Connect the base unit to the power socket.

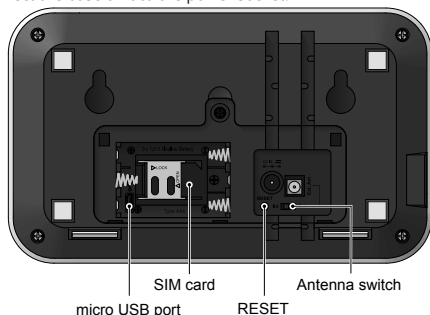

Configuring the Alarm System

Configure the alarm system according to your requirements. For further information, please refer to the detailed operating manual provided with the alarm system.




Using the Remote Control

- 1 Select the Register menu option on the base unit.
- 2 Remove the plastic strips.
- 3 The base unit display indicates that registration has been completed successfully on the alarm system.




Using the Window and Door Contacts

- 1 Insert two batteries (AAA) in the battery compartment paying attention to correct polarity.
- 2 Assemble the window/door contacts on all entrance doors and windows.
- 3 Please note that the window/door contacts must be aligned to each other as illustrated when assembled.

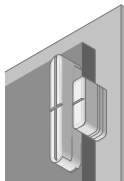

Using the IP Camera

- 1 Position or hang the IP camera in a suitable location.
- 2 Download the ProHome app from the App Store or Google Play Store.
- 3 Configure the IP camera according to your requirements. For further information, please refer to the detailed operating manual provided with the IP camera.

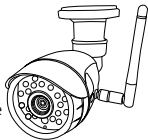


Using the Motion Detector

- 1 Install the holder for the motion detector at a suitable location.



WARNING! Risk of electric shock! Risk of serious injuries through damaging cables or pipes! During installation, pay attention to the possibility of cables running in the walls!

- 2 Insert three batteries (AA) in the battery compartment paying attention to correct polarity.
- 3 Hook the motion detector in the holder using the bracket on the rear side.

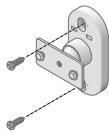

Using the Outdoor Siren

- 1 Loosen the screws in the battery compartment cover using an appropriate screwdriver.
- 2 Insert three AA batteries in the battery compartment. Pay attention that the batteries are inserted the right way around.
- 3 Replace the battery compartment cover on the outdoor siren.
- 4 Tighten the screws in the battery compartment cover using an appropriate screwdriver.

